

1 Install USB Drivers and Track-It™ Software

IMPORTANT! Do NOT plug the Track-It™ Data Logger into the USB port until AFTER the USB Drivers and Track-It Software have been installed.


Download Track-It Data Logger Software from:

http://www.monarchinstrument.com/Software/Track-It_Software.zip

Unzip the downloaded file to a local directory on your PC.

Double click **CD_Start.exe**. This will launch the Track-It Data Logger's splash screen (shown below).

1. Click **Install USB Driver** and follow the prompts. Accept any security messages to continue installation.
2. Click **Install Software** and follow the instructions to complete the installation. The software is now installed and ready to use.
3. Logger and software manuals may also be accessed here.

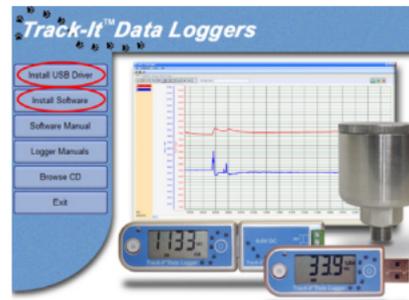


Note: If you have trouble downloading, refer to our guide, [How To Install Track-It™ Drivers and Software](#).



2 Install Data Logger Battery (if necessary)

Most models have the battery preinstalled. For the **Rugged Temp Logger**, install the battery that was supplied with your Track-It Data Logger. Refer to the diagram below for installation.

Remove threaded end cap with coin or screwdriver and insert battery as shown.

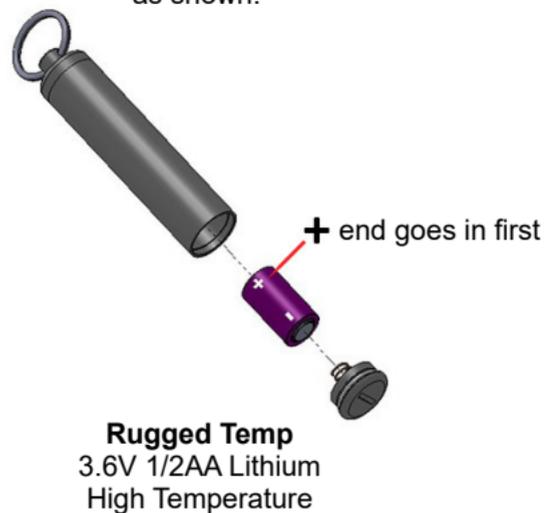


To replace the battery in any Track-It Data Logger, refer to the product's Instruction Manual.

3 Connect Data Logger and Track-It™ Software

Plug the Track-It Logger into an available USB port on the PC. Some models plug directly into the USB port; others connect to the USB port with a cable (supplied). If the *Found New Hardware Wizard* appears, follow the prompts to complete the installation.

Start the Track-It Software by double clicking the Track-It icon (shown at right) on your PC or from the Start menu.

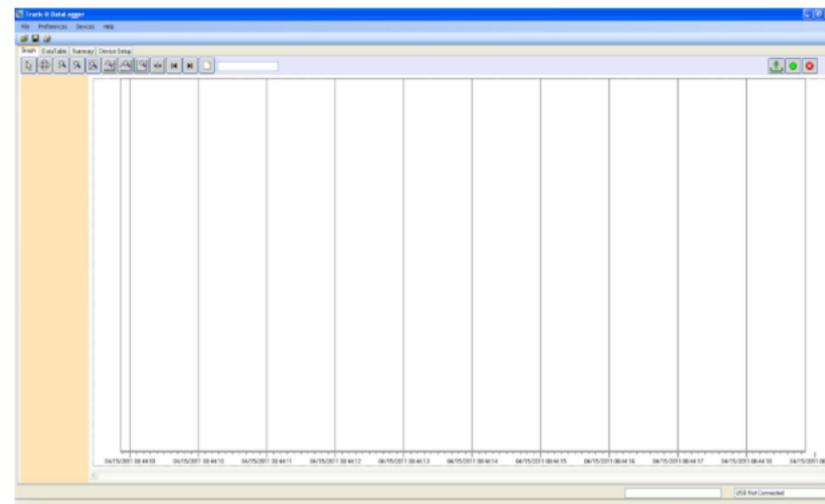

4

Connect Your Data Logger

If the USB drivers installed properly, you will see *Device Connected* displayed in the lower right-hand corner of the Track-It Software window.



You can now begin using Track-It Software to configure your data logger and/or view recorded data.


Track-It Software will list all Track-It Data Loggers connected to your PC. To view the list and switch between loggers, click on **Devices** then **Device List**.



5

Configure and Start Logging Data

Select the **Device Setup** tab as shown. The software will automatically retrieve and display the data logger configuration.

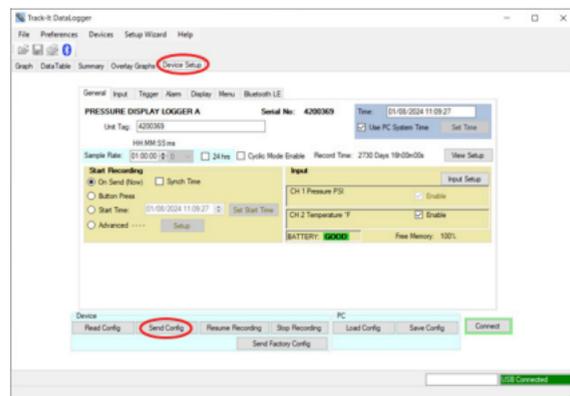

Review default factory configuration settings and make any necessary changes - sample rates, triggers, alarms etc. Be sure that the time and date is set properly.

Click the **Send Config** button under the Device Configuration section of the window. **Your data logger is now operational!**



15 Columbia Drive
Amherst, NH 03031

Ph.: 603-883-3390 // 800-999-3390
www.monarchinstrument.com

1071-4396-119 0124



Track-It™



Para español, por favor contacte con el fabricante.

Pour le français, veuillez contacter le fabricant.

Für Deutsch wenden Sie sich bitte an den Hersteller.

Per l'italiano contattare il produttore.

**QUICK START
GUIDE**